




ROWING
INSTALL INSTRUCTIONS
PAGE DIRECTORY

ALUMINUM ROWING DOCK CONNECTION (BOLTED AND HINGED)	1-8
---	-----



INSTALLATION INSTRUCTIONS

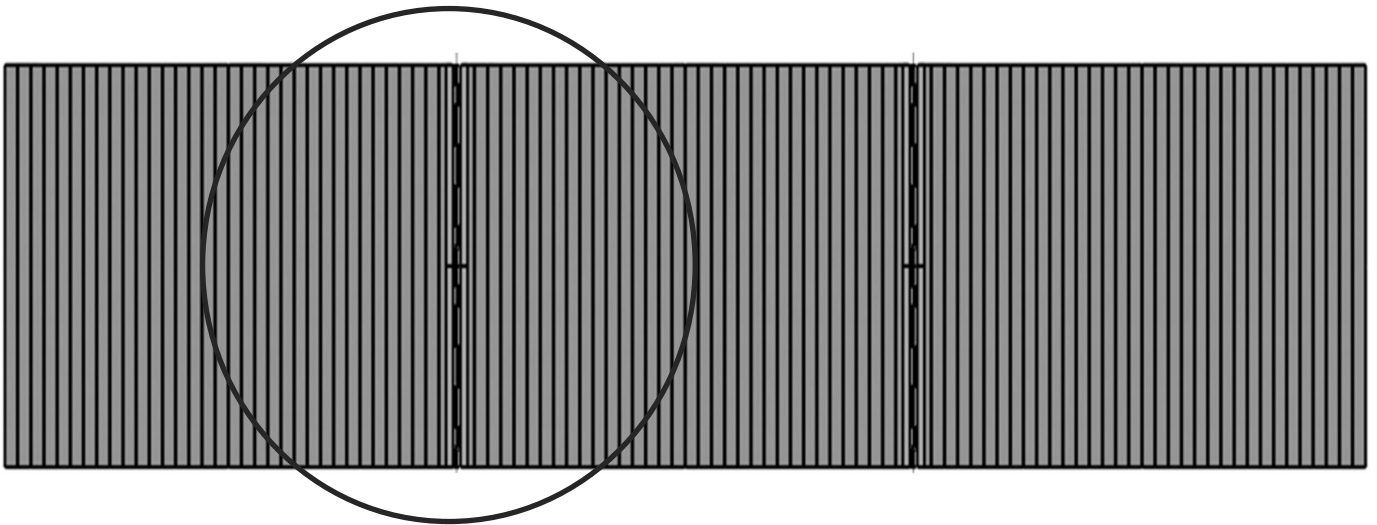

Aluminum Rowing Dock Connection (Bolted and Hinged)

* Your project may have one or both of these connections. All Rowing Docks are fully pre-assembled and labeled for ease of installation.

BEFORE INSTALLATION





Thank you for your purchase with AccuDock. Our products have been constructed for durability and designed for easy installation. Please take the time to read these instructions carefully before installing your attachment.

Check your package carefully to ensure you have all parts and hardware listed below. Should you be missing any of the hardware please contact us.

PARTS LIST

While unpacking, please be sure to not discard any of the parts. Set them aside on a flat surface and ensure all parts are present prior to installation.


Note: The part list below does not provide quantities due to the variation of hardware required for each installation. Every installation is unique and may require different quantities and hardware size.

Part	Qty	
PVC Pipe with Aluminum Pin (For Hinged Connection Only)	-	
3/8" or 1/4" Hex Bolt	-	
3/8" or 1/4" Flat Washer	-	
3/8" or 1/4" Locknut	-	

TOOLS NEEDED

9/16" Wrench (2) or 7/16" Wrench (2)

HARDWARE LIST

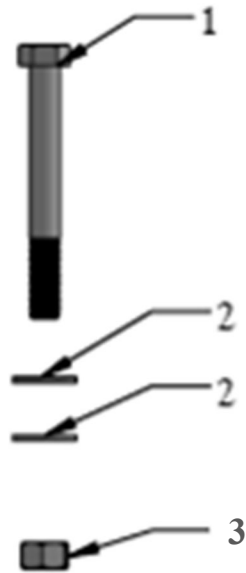


Label	Description
1	3/8" or 1/4" Hex Bolt
2	3/8" or 1/4" Flat Washer
3	3/8" or 1/4" Locknut

STEP ONE

Bolted Connection:



First, remove the PVC deck boards at the ends of the two dock sections that will be connected. This step will allow you to gain access to the inside of the aluminum dock frame. Save the deck screws, you will need them later in order to re-install the deck boards.

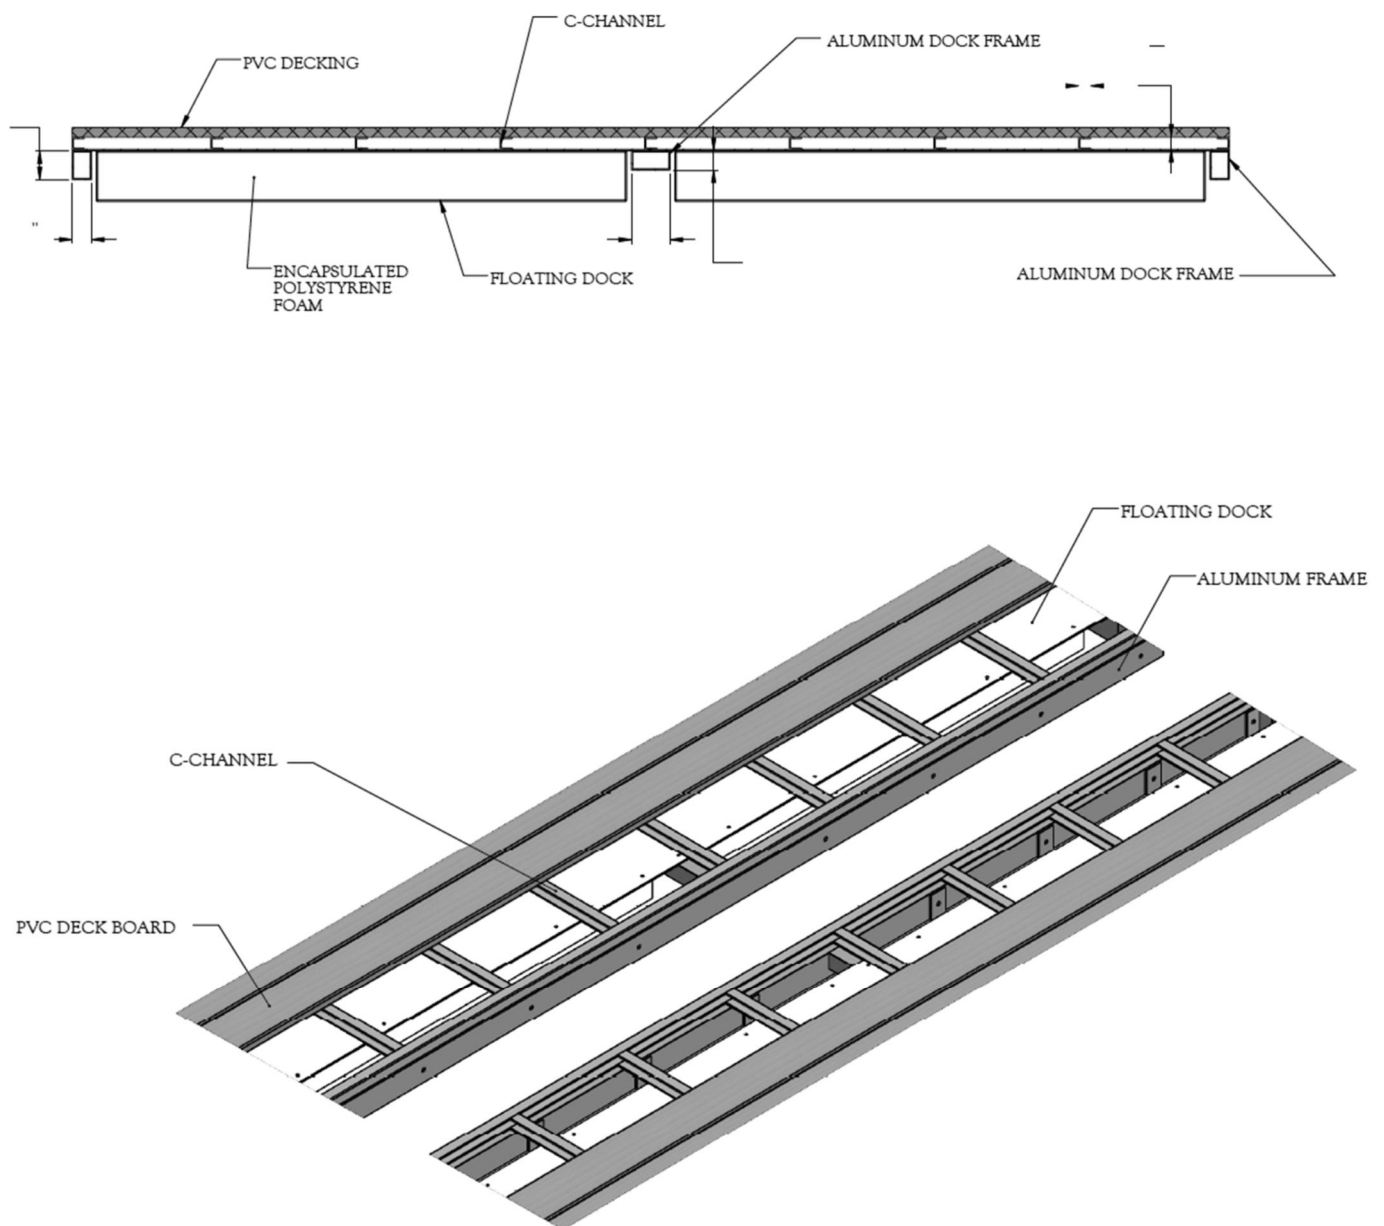

STEP TWO

Next, position the floating dock sections side by side to each other with the pre-drilled bolt holes aligned. Insert the 3/8" Hex Bolt along with a Flat Washer through the pre-drilled holes on both the aluminum dock frames. Insert a Flat Washer and Locknut on the other side and secure connection. Repeat this step at each pre-drilled location for each bolted connection.

Lastly, re-install the PVC deck boards using the original deck screws.

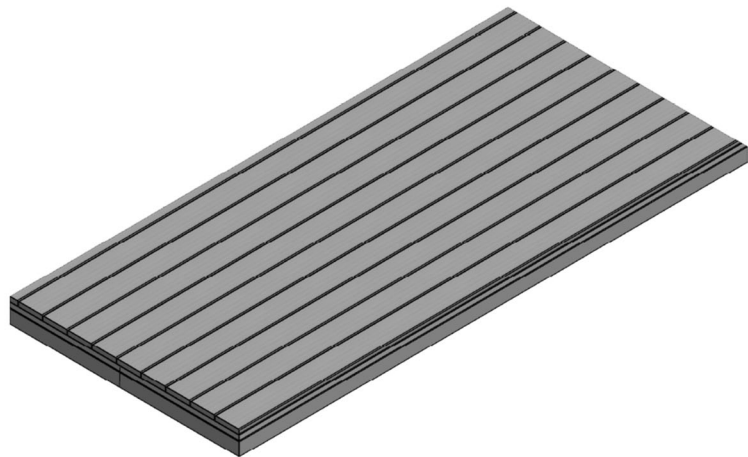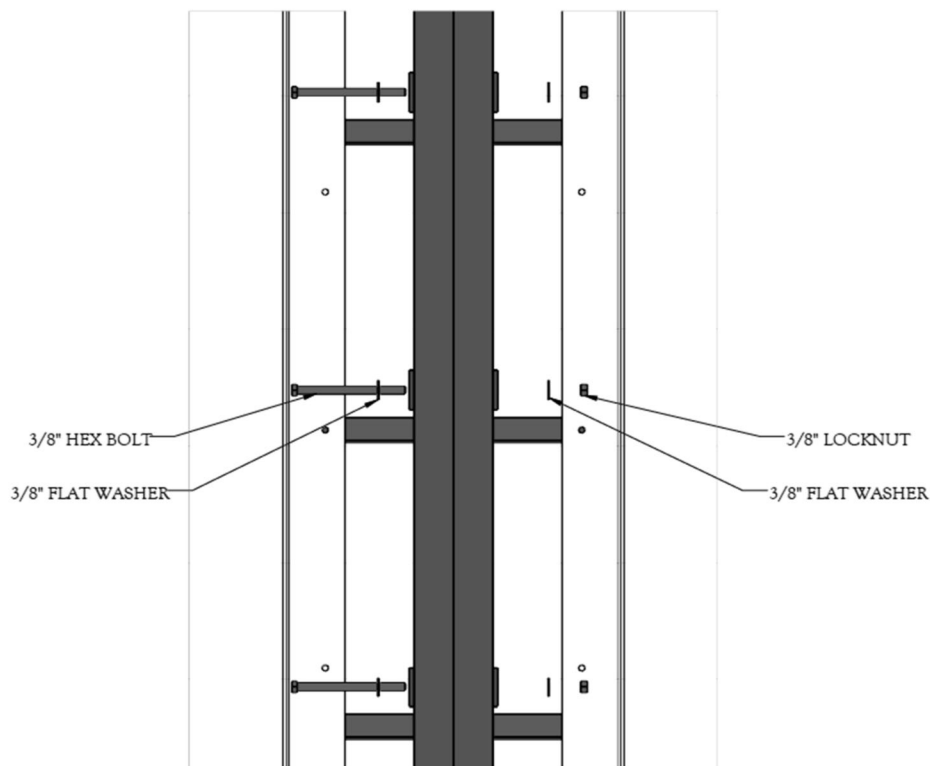


STEP ONE

Hinged Connection:

First, place adjoining floating dock sections in-line with each other and align the hinge halves on the same axis.


Note: The floating dock sections have hinge halves pre-installed (with locations pre-labeled, and PVC decking notched for flush hinge mounting, allowing a no trip hazard).

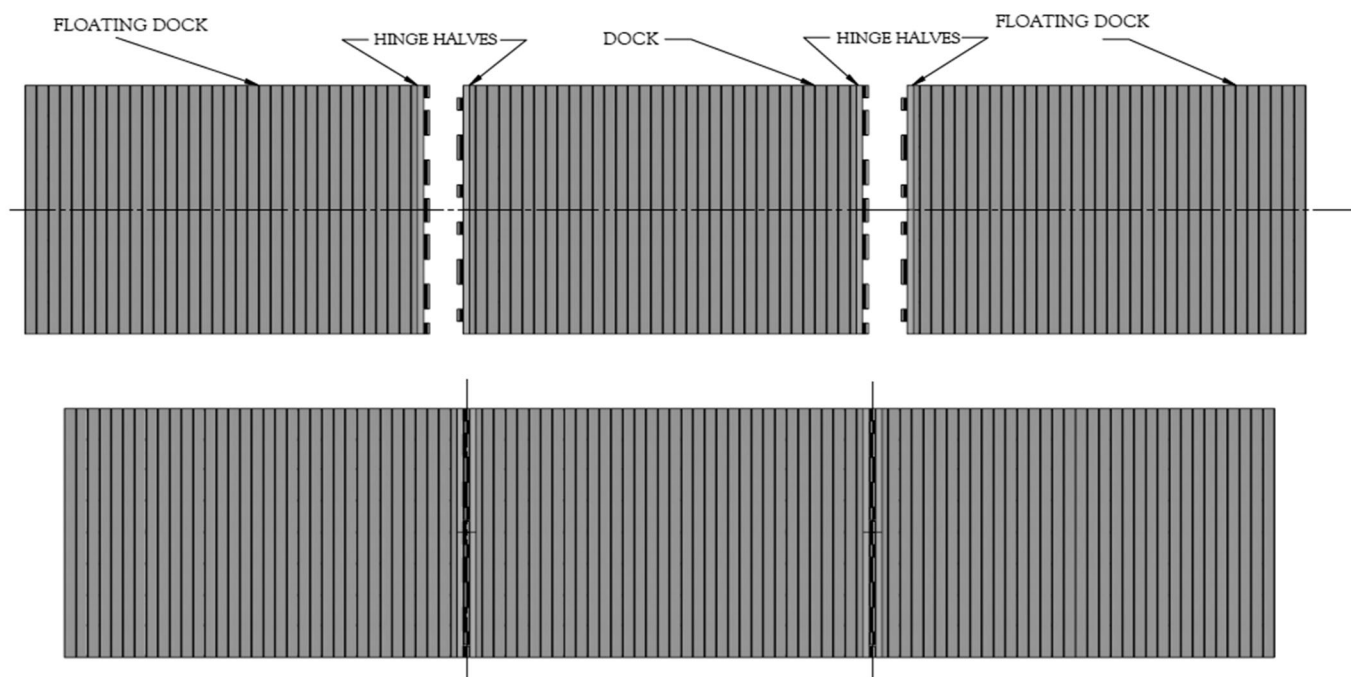

STEP TWO

Next, insert the PVC Pipe through the hinge until the end of the pipe is flush with the end of the floating dock. Repeat step with the Aluminum Pin by inserting into the PVC Pipe until the end of the pin is flush with the end of the dock. When inserting the pin, make sure the bolt holes align at the farthest end. See Detail A.

Lastly, insert the 1/4" Hex Bolt along with a Flat Washer through the side of the PVC Pipe. Insert a Flat Washer and Locknut on the other side of the pipe and secure connection. Repeat this step at each hinged connection. See Detail B.

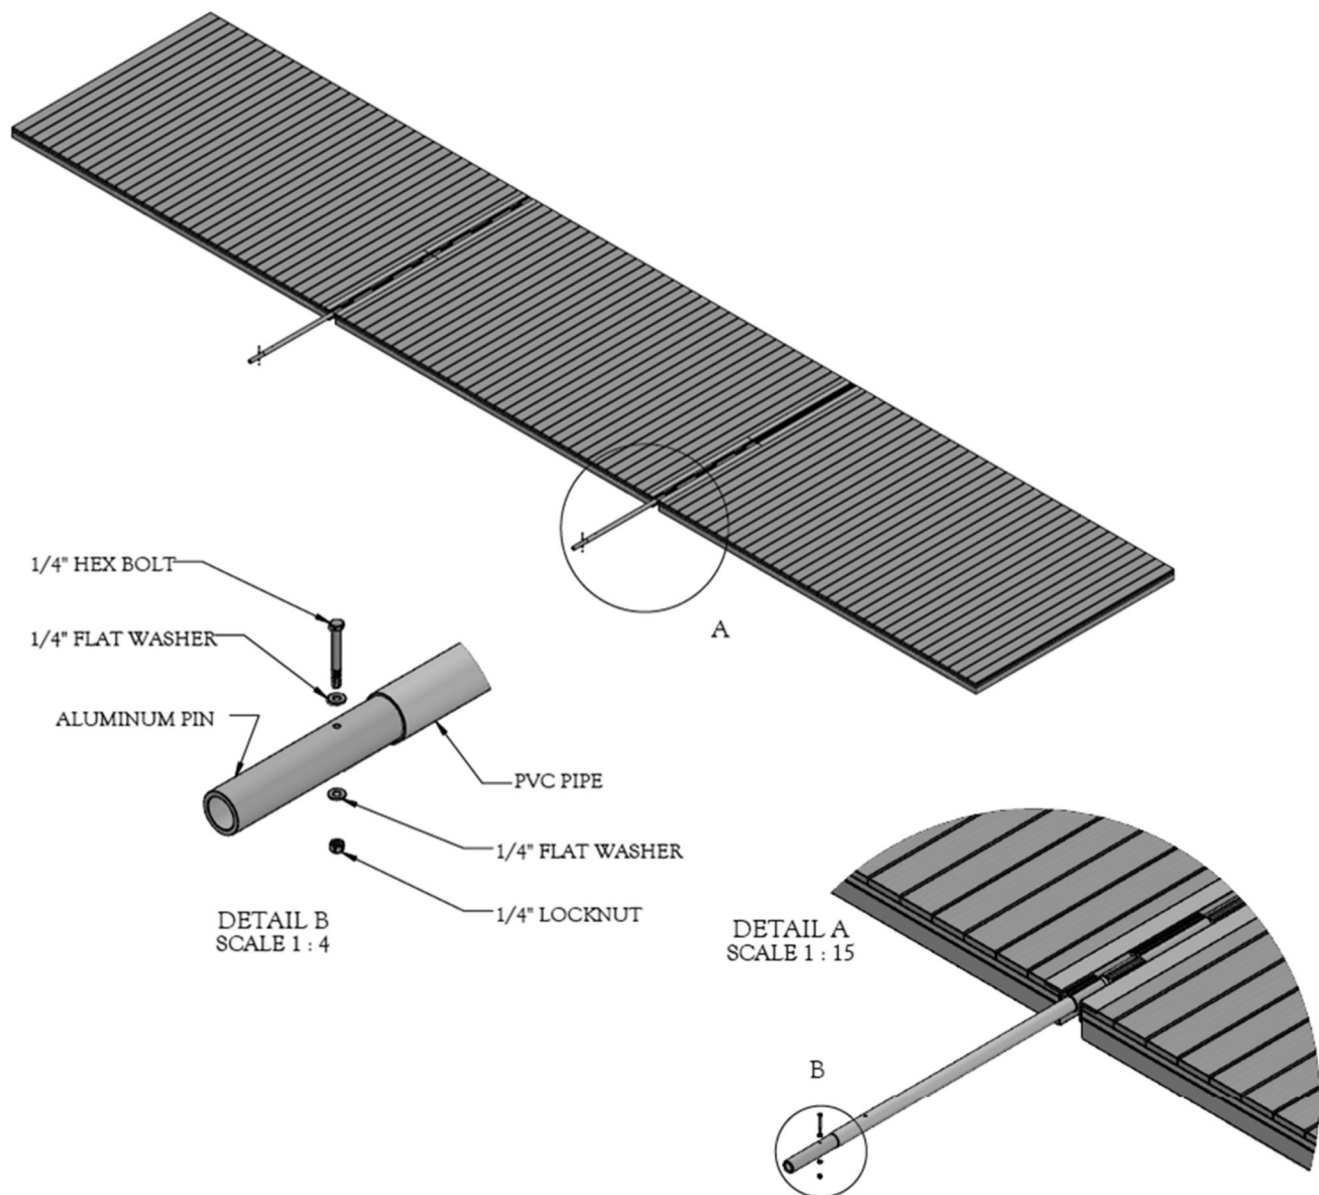



FOR MORE INFORMATION CALL 954.785.7557 OR
EMAIL SALES@ACCUDOCK.COM
WWW.ACCUDOCK.COM